AxiomV SQL ™ Technical Bulletin

2 Automatic Road, Suite 108 Brampton, Ontario Canada L6S 6K8

Number: 37 AxiomV[™] Upgrade from AxiomIII[™] 3.8



Although both systems use the same hardware, there are major differences between the two. AxiomV[™] handles some thing differently then AxiomIII[™], and therefore some things do not transfer over when upgrading from AxiomIII[™] to AxiomV[™]. These items will have to be entered manually.

- 1. History files
- 2. Operators and Operator Profiles
- 3. Badge Templates and Signatures (for badging)
- 4. Maps
- 5. Alarm Monitoring
- 6. ASCII messages and Message Ports



A firmware upgrade will be required for the system to function correctly. If the original firmware chips are not flash chips then the NC100 will likely need to be modified to handle flash chips.

AxiomV[™] Server Upgrade

You can upgrade AxiomIIITM r3.8 to AxiomVTM on the same PC where you are currently running AxiomIIITM r3.8 or on another PC.

The PC on which $AxiomV^{TM}$ upgrade is to run needs Microsoft Access 97 drivers. In case you do not want to install Microsoft Access 97 on your PC, you can install & then uninstall $AxiomIII^{TM}$ r3.8 from your older $AxiomIII^{TM}$ r3.8 CD. This will keep the necessary drivers required for $AxiomV^{TM}$ upgrade on your PC.


Upgrade from AxiomIII™ 3.8 to AxiomV on a New PC

 Install AxiomV[™] as per the document TB35_AxiomVInstallation for the Enterprise version or TB49_AxiomV Install-Uninstall for the Professional version. If you are installing the Enterprise version be sure to select the Create New Database option when you install Data Server.

- 2. Copy DBUpd50.exe from the upgrade folder of your AxiomV CD to your local machine.
- 3. Run DBUpd50.exe.




4. Select the path of your AxiomIII™ 3.8 folder.

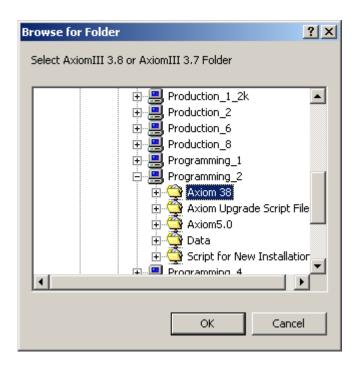

5. Click OK and it will start upgrading AxiomIII™ 3.8 to AxiomV



6. As the upgrade finishes, it will log a text file indicating all the upgrade messages as well as error messages, if any.

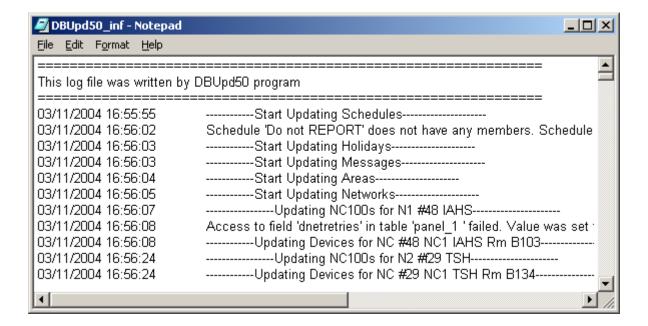


This log file is also saved on your local machine in the same folder where you copied DBUpd50.exe.

- 7. Disconnect all the networks from your AxiomIII™ 3.8 and close the client so that AxiomIII™ 3.8 server closes as well.
- 8. Refresh the CommsServer and DataServer Services and log on to AxiomV[™] client.

Upgrade from Axiom 3.8 to AxiomV on the same PC


- 1. Install AxiomVTM as per the document *TB35_AxiomVInstallation* for the Enterprise version or *TB49_AxiomV Install-Uninstall* for the Professional version. If you are installing the Enterprise version be sure to select the *Create New Database* option when you install Data Server.
- 2. Copy DBUpd50.exe from the upgrade folder of your AxiomV™ CD to your local machine.
- 3. Run DBUpd50.exe
- 4. The upgrade utility will find the AxiomIII™ 3.8 on your PC.

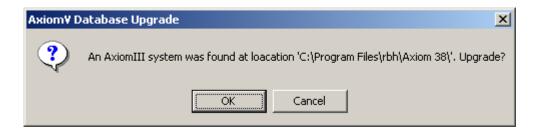

5. Click *Ok* and it will start upgrading from AxiomIII™ to Axiom V



6. As the upgrade finishes, it will log a text file indicating all the upgrade messages as well as error messages, if any.

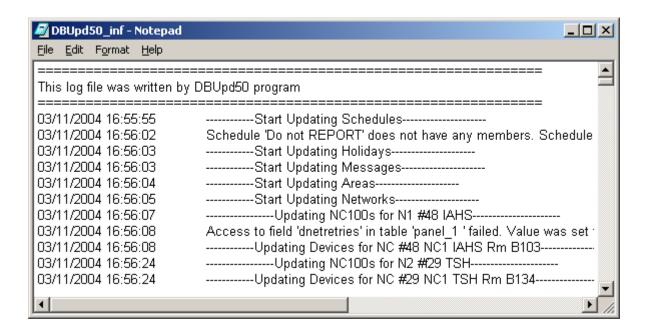

This log file is also saved on your local machine in the same folder where you copied DBUpd50.exe.

- 7. Disconnect all the networks from your AxiomIII™ 3.8 and close the client so that AxiomIII™ 3.8 server closes as well.
- 8. Refresh the CommsServer and DataServer Services and log on to AxiomV[™] client.

AxiomV[™] Client Upgrade

In actuality the client isn't upgraded. Uninstall the Axiom3.8™ client and install the AxiomV™ client.